


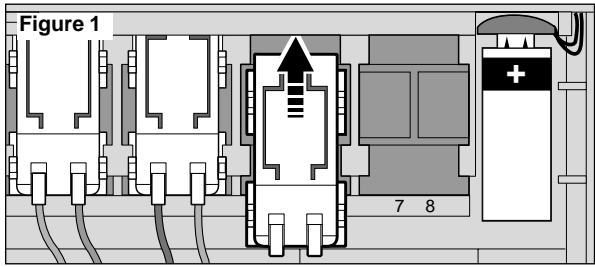

# Installation Instructions GreenKeeper™ Plug-In Module

1. Turn Control Dial to **OFF** position and remove lower housing cover.
2. Referring to illustration in **Figure 1**, position new Zone Module into first expansion slot (from left to right). Slide Module toward top of controller to engage locking tab.  
**Note:** You will hear a “click” when the Module locks into position.
3. Refer to “Connecting Control Valves and Transformer,” page 6 of your GreenKeeper User Guide to connect valve wires.
4. Refer to “Set Zone Run Times,” page 16 of your GreenKeeper User Guide to add new Zones to watering Program(s).
5. Test operation of new module. Refer to “To Run Selected Zone(s),” page 19 of your GreenKeeper User Guide.




© 1994 The Toro Company

368-0080 Rev. A



# Installation Instructions GreenKeeper™ Plug-In Module

1. Turn Control Dial to **OFF** position and remove lower housing cover.
2. Referring to illustration in **Figure 1**, position new Zone Module into first expansion slot (from left to right). Slide Module toward top of controller to engage locking tab.  
**Note:** You will hear a “click” when the Module locks into position.
3. Refer to “Connecting Control Valves and Transformer,” page 6 of your GreenKeeper User Guide to connect valve wires.
4. Refer to “Set Zone Run Times,” page 16 of your GreenKeeper User Guide to add new Zones to watering Program(s).
5. Test operation of new module. Refer to “To Run Selected Zone(s),” page 19 of your GreenKeeper User Guide.

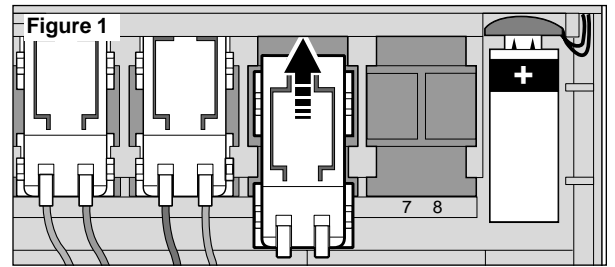


© 1994 The Toro Company

368-0080 Rev. A

© 1994 The Toro Company


368-0080 Rev. A

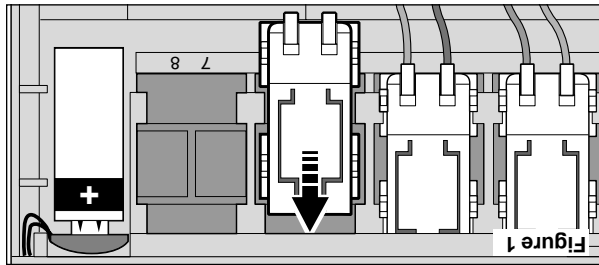

1. Turn Control Dial to **OFF** position and remove lower housing cover.
2. Referring to illustration in **Figure 1**, position new Zone Module into first expansion slot (from left to right). Slide Module toward top of controller to engage locking tab.  
**Note:** You will hear a “click” when the Module locks into position.
3. Refer to “Connecting Control Valves and Transformer,” page 6 of your GreenKeeper User Guide to connect valve wires.
4. Refer to “Set Zone Run Times,” page 16 of your GreenKeeper User Guide to add new Zones to watering Program(s).
5. Test operation of new module. Refer to “To Run Selected Zone(s),” page 19 of your GreenKeeper User Guide.

© 1994 The Toro Company

368-0080 Rev. A

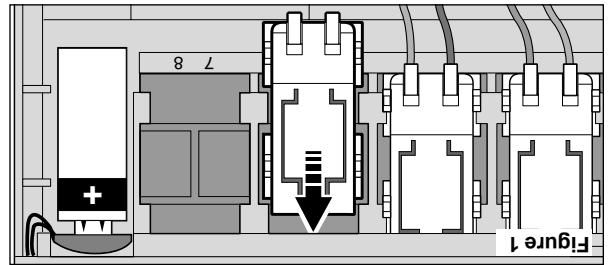

1. Turn Control Dial to **OFF** position and remove lower housing cover.
2. Referring to illustration in **Figure 1**, position new Zone Module into first expansion slot (from left to right). Slide Module toward top of controller to engage locking tab.  
**Note:** You will hear a “click” when the Module locks into position.
3. Refer to “Connecting Control Valves and Transformer,” page 6 of your GreenKeeper User Guide to connect valve wires.
4. Refer to “Set Zone Run Times,” page 16 of your GreenKeeper User Guide to add new Zones to watering Program(s).
5. Test operation of new module. Refer to “To Run Selected Zone(s),” page 19 of your GreenKeeper User Guide.

